


**I**

**D** Für die Installation und für den Betrieb der Leuchten sind die nationalen Sicherheitsvorschriften zu beachten.




**F** 'Pour l'installation et le fonctionnement des luminaires il est impératif de respecter les normes nationales de sécurité en vigueur'




**GB** Please note national safety instructions for installation and operation of this luminaire.

**PL** W celu prawidłowej instalacji i poprawnego działania oprawy należy przestrzegać krajowych przepisów bezpieczeństwa.

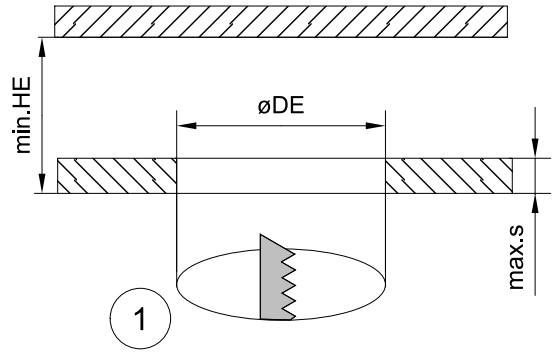


REDLR 235/4000 SMB/T	223-225	280	40
REDLR 235/3000 SMB/T		240	
REDLR 235/2000 SMB/T		195	
REDLR 195/3000 SMT	181-185	205	25
REDLR 195/2000 SMT		160	
REDLR 195/1100 SMT		140	
REDLR 195/3000 SMB		185	
REDLR 195/2000 SMB		145	
REDLR 195/1100 SMB		125	
REDLR 150/2000 SMB/T	135-140	135	25
REDLR 150/1100 SMB/T		115	
Typ	øDE	min.HE	max.S

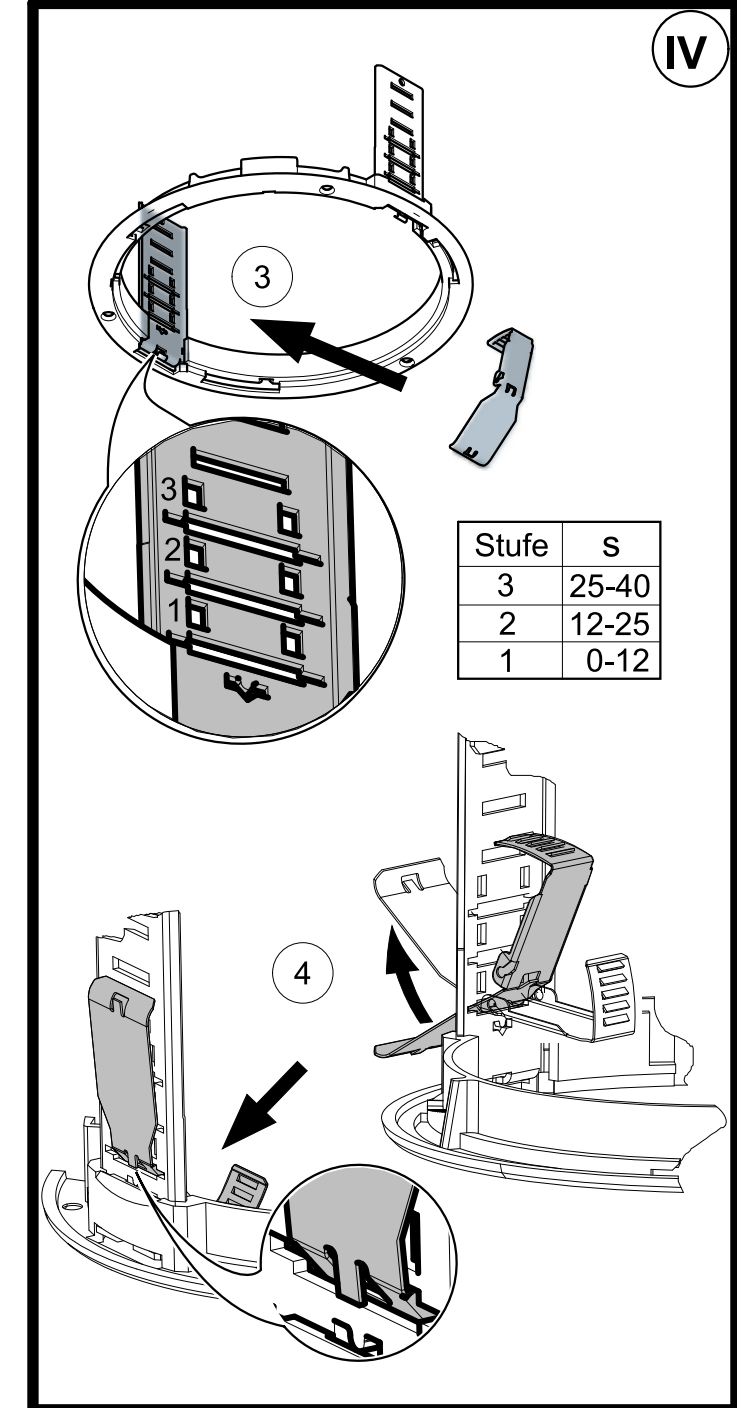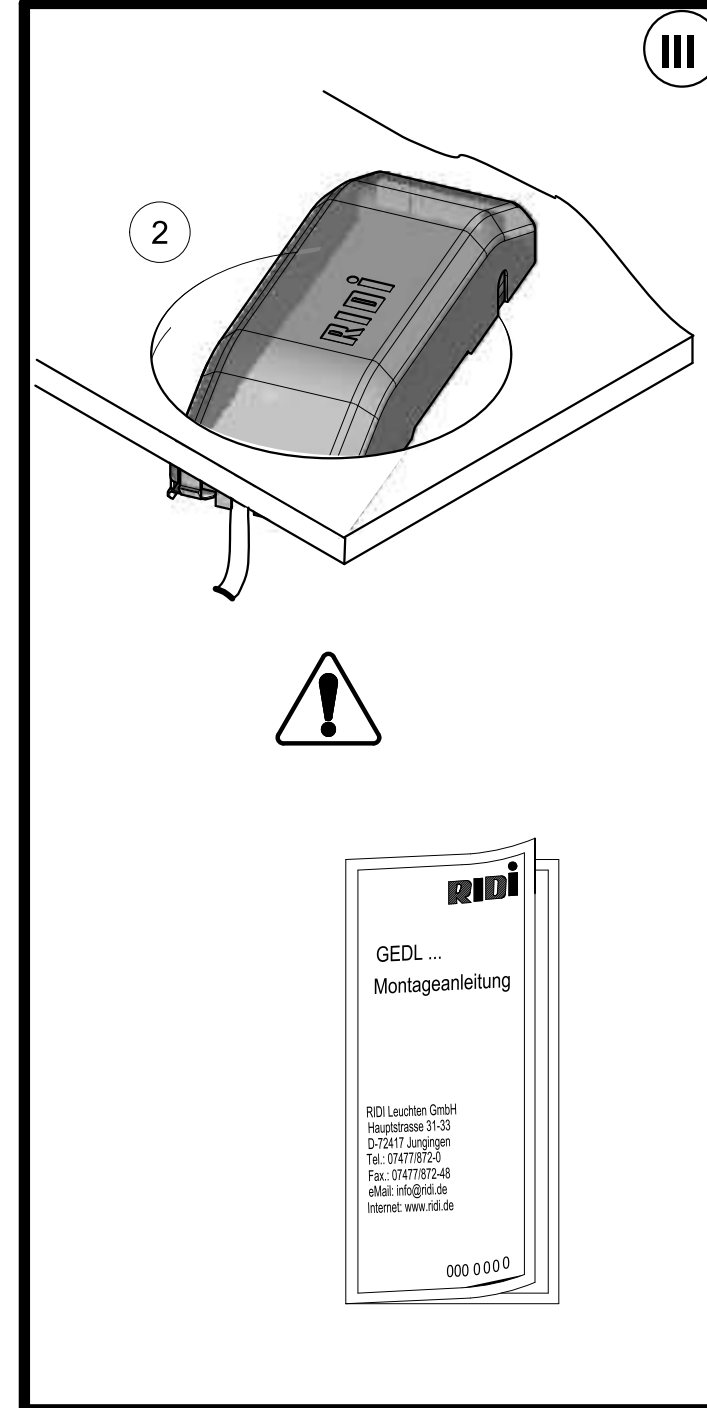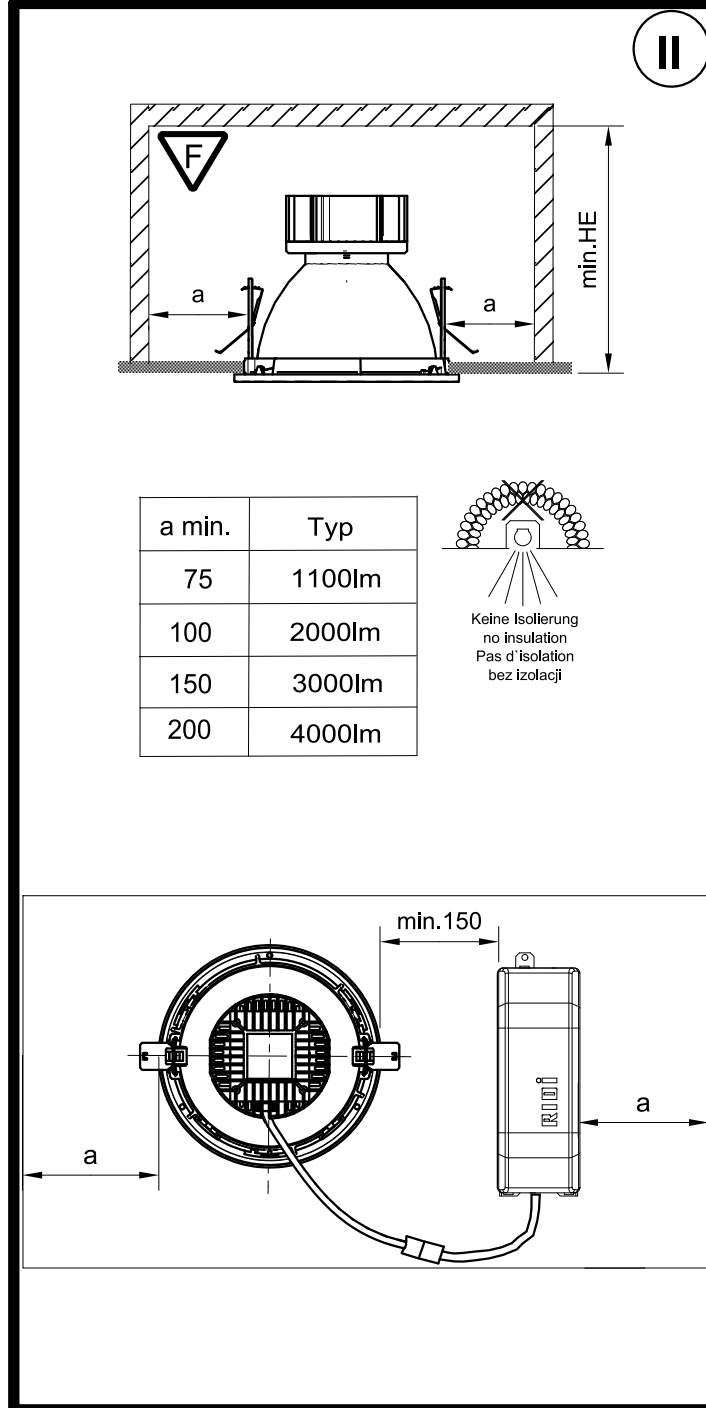

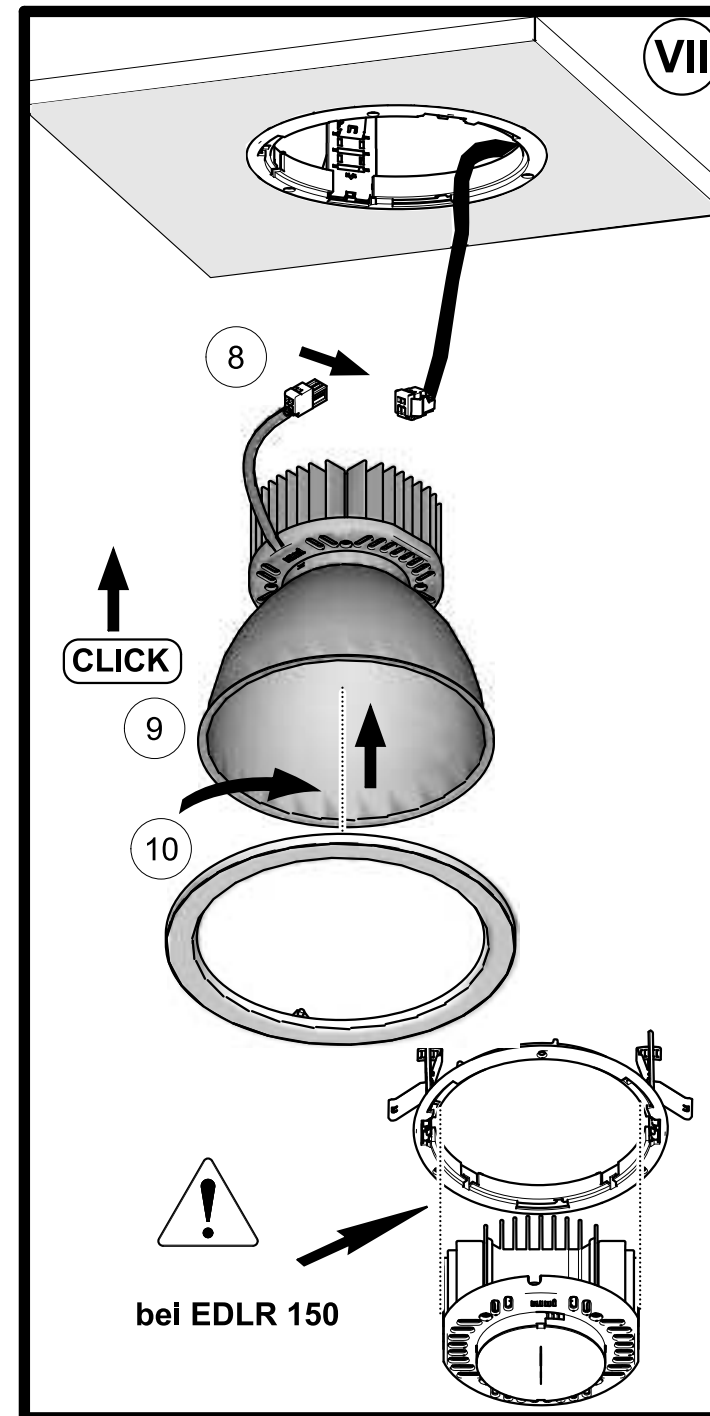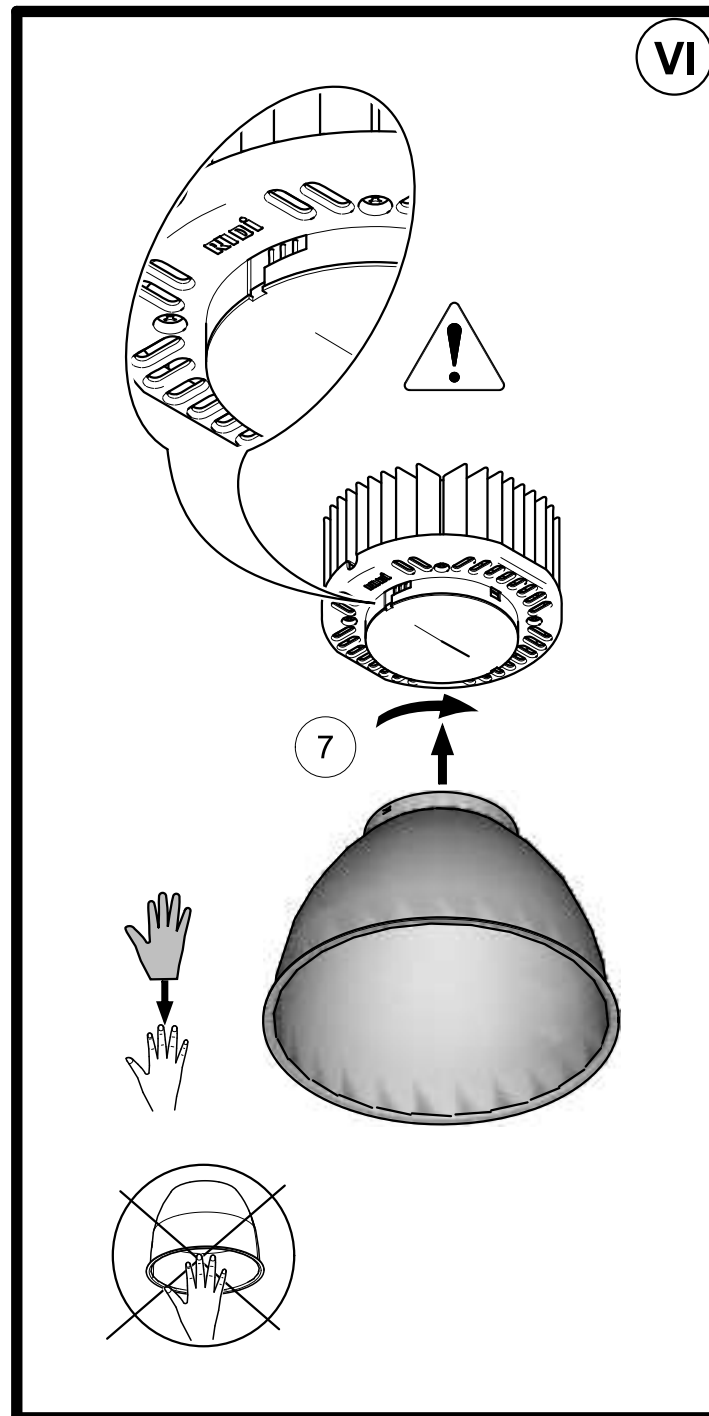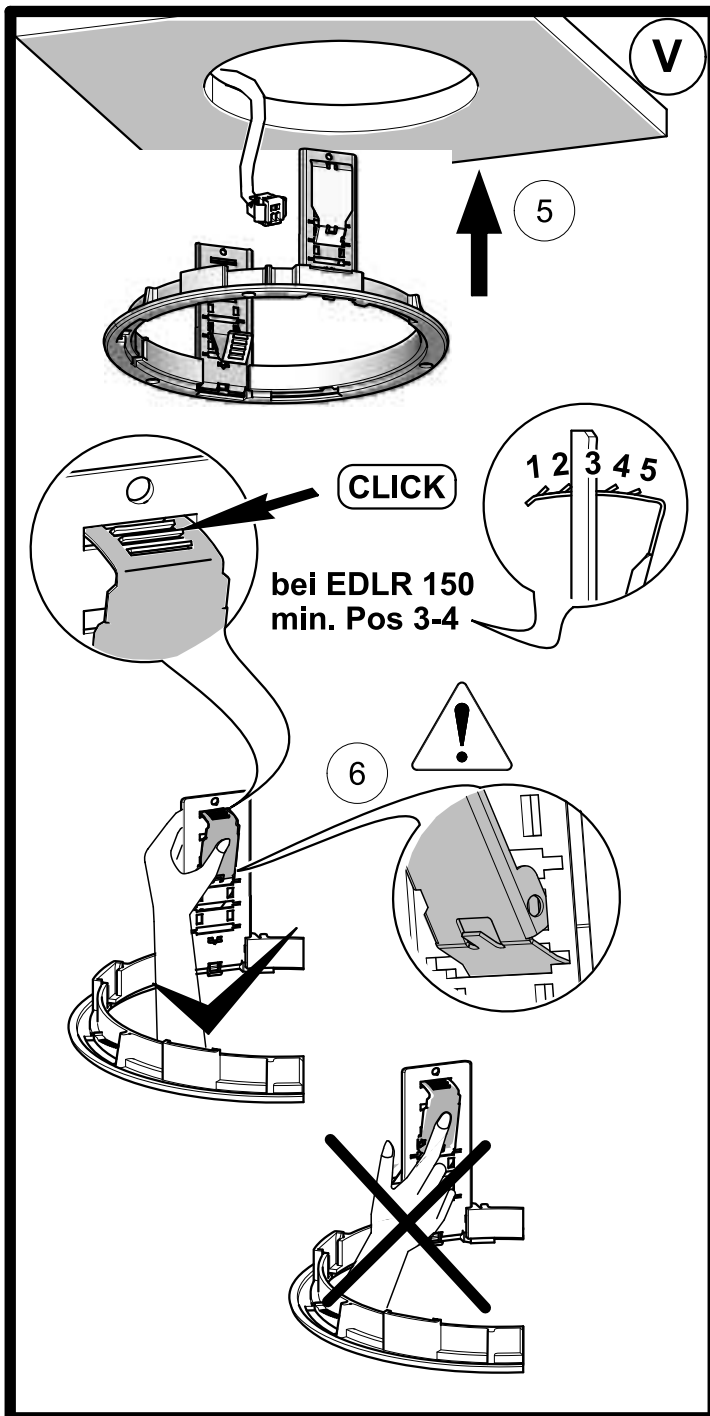

**RIDI**

**REDLR SMB/SMT  
150-195-235  
Montageanleitung**

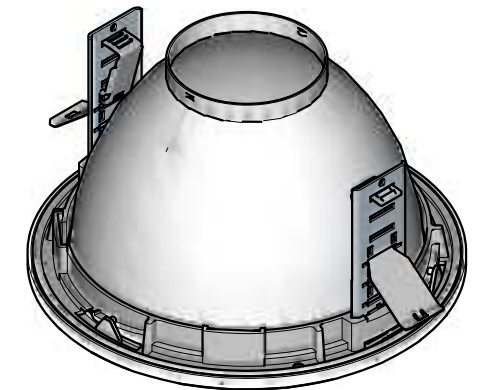

RIDI Leuchten GmbH  
Hauptstrasse 31 - 33  
D-72417 Jungingen  
Tel.: 07477/872-0  
Fax.: 07477/872-48  
eMail: info@ridi.de  
Internet: www.ridi.de